



QUICK GUIDE

BATTERY-POWERED HEDGE TRIMMER

Assembly

1. After charging your Battery Pack, slide it into the Battery cradle on the Trimmer Housing, aligning the ribs in the cradle with the slots in the Battery until it is latched into place (**Figure 1**).
2. Check that the Battery is securely locked into place.
3. To remove the Battery press and hold the Battery Lock Button on the Back of the Trimmer Housing and slide the Battery away from the Trimmer.

How to use

1. Remove the Protective Blade Cover and store in a safe place.
2. Place one hand on the Sub-Handle Switch and place the other hand on the Power Switch Handle.
3. To start the Trimmer, press the Switch Self-locking Button with your thumb and squeeze the Power Switch. The Trimmer will stay running as long as the Sub-Handle Switch and Power Switch are engaged. Once the trimmer has started, you may release the Self-Locking Button.
4. To stop the Trimmer, release the Power Switch. The Trimmer will also stop if you release the Sub-Handle Switch in an emergency but letting go of the Power Switch is the preferred method.
5. The Hedge Trimmer Handle can be rotated 90° left or right for a better ergonomic grip while in operation. Firmly grab the Sub-Handle with one hand (**Figure 2**). With the other hand, press the Rotation Self-Locking Button to release the Handle. Rotate the Handle 90° left or right depending on the direction you will be Cutting. When fully rotated the Handle will lock into position.

BATTERY NOTICE

- Charge battery full before first use
- Try not to charge at below 0 °C
- Compatible with +62 volt 5.0AH and 2.5AH Battery

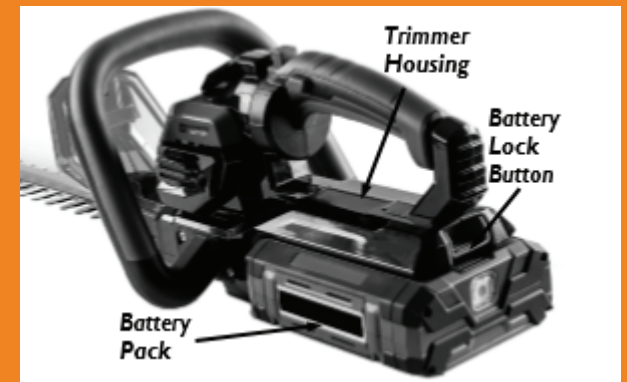


Figure 1

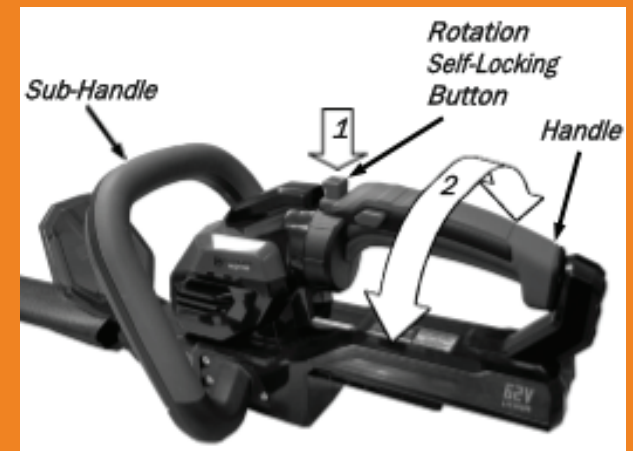


Figure 2