
Instruction Manual

E-Zee L Ergo Sitstand Desk




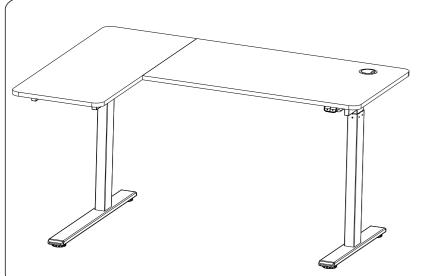

Technical data		
Product No.	ET116L	
Column Design	Standard, 2 segments	
Max. Load Capacity	50KG	
Max. Speed	25mm/s	
Highest Position	1230mm	
Lowest Position	730mm	
Stroke	500mm	
Inner Tube	70mmx40mmx2mm	
Outer Tube	75mmx45mmx1.5mm	
Tabletop Dimensions	1400mmx1060mmx18mm Particle Board	

Accessory list

 Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact customer service department if there are any missing tools or installation problems.



















Component List


No.	Part	Qty	No.	Part	Qty
1	Left Tabletop	1	2	Columns	2
3	Left Pedestal	1	4	Power Plug	1
5	Cable Tie	4	6	Right Tabletop	1
7	Tabletop Connecting Sheet Metal	2	8	Connecting Tube	1
9	Decorative Cover	1	10	Right Pedestal	1
11)	Transmission Rod	1	12)	Switch Cord	1
13		1			

 


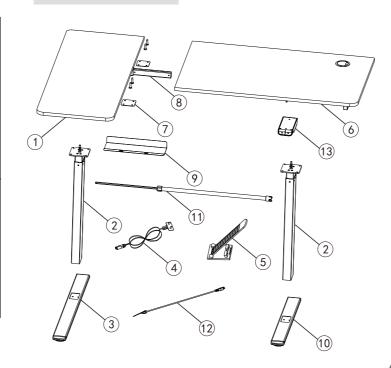


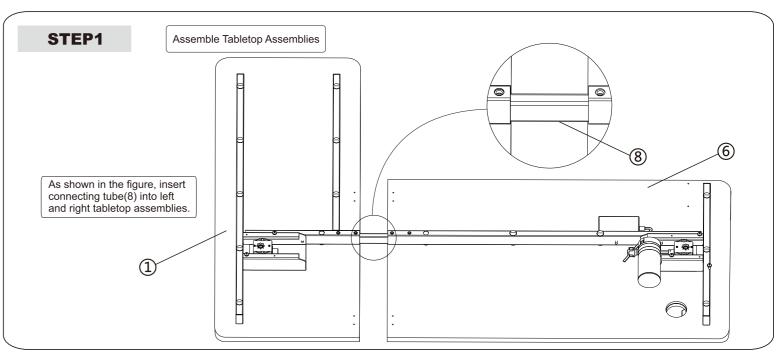


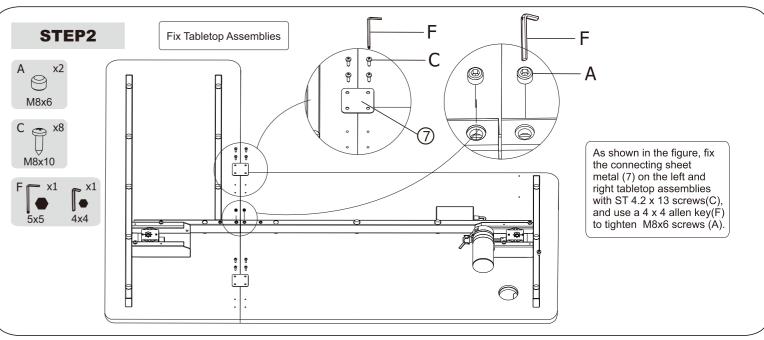


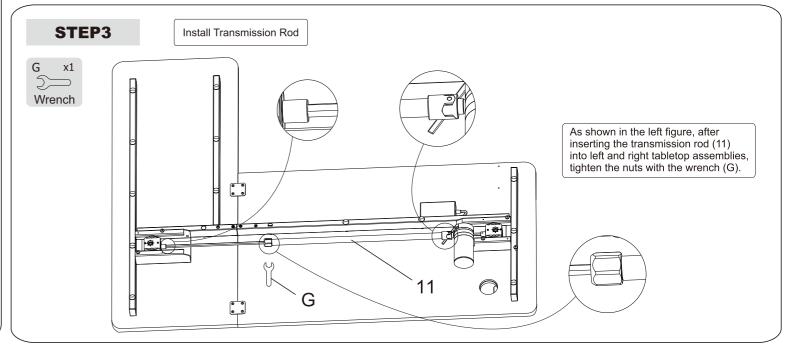


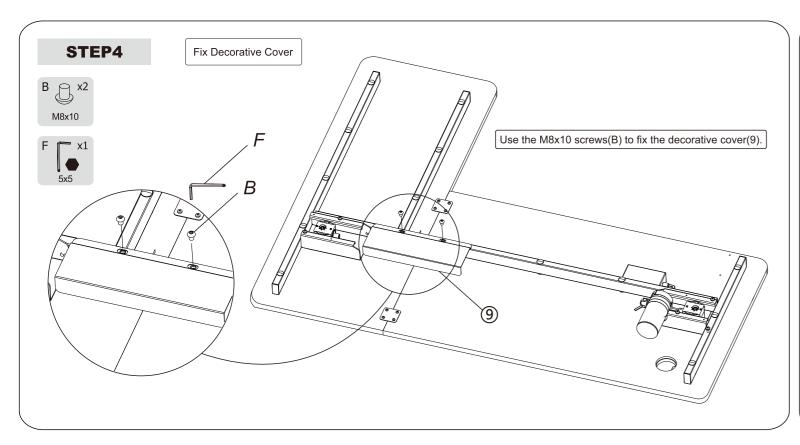

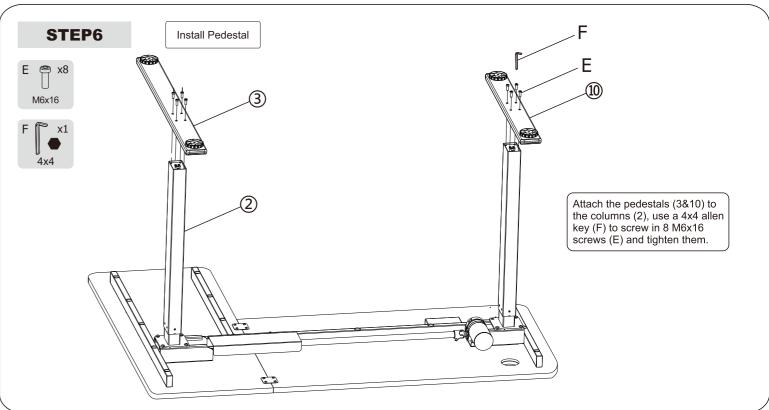

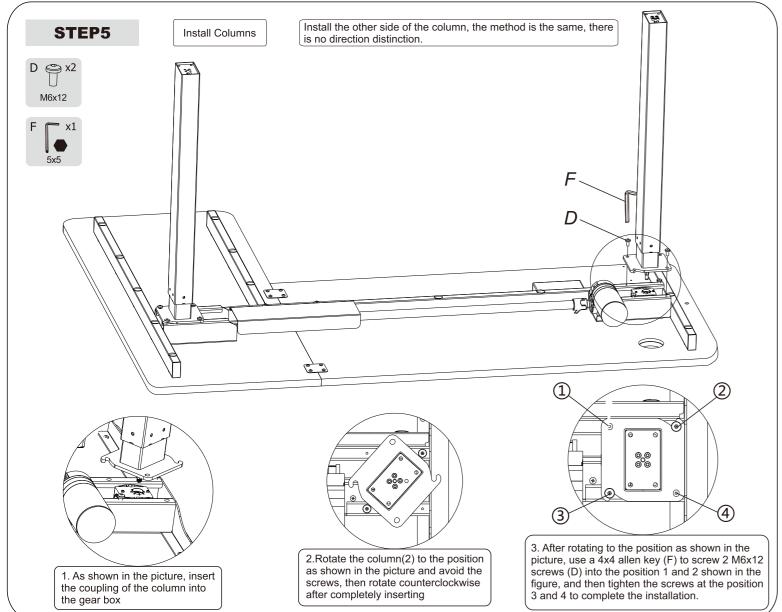

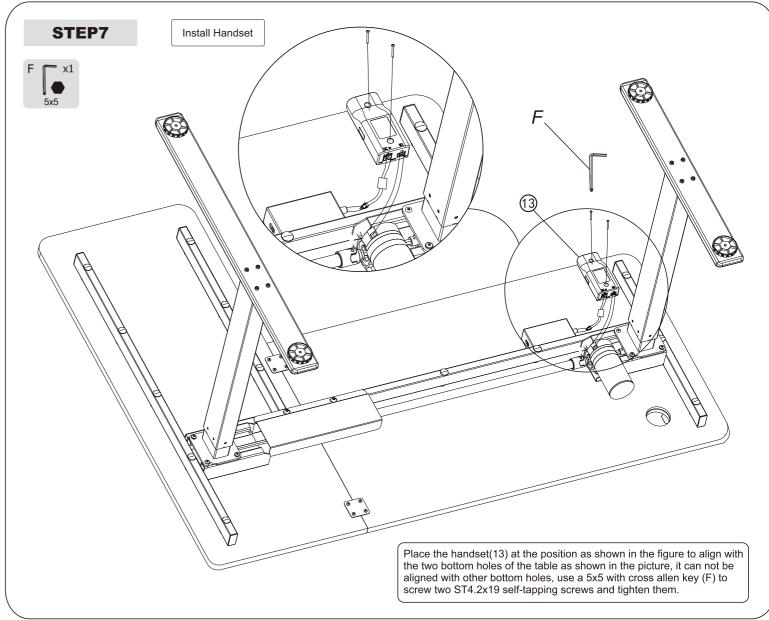

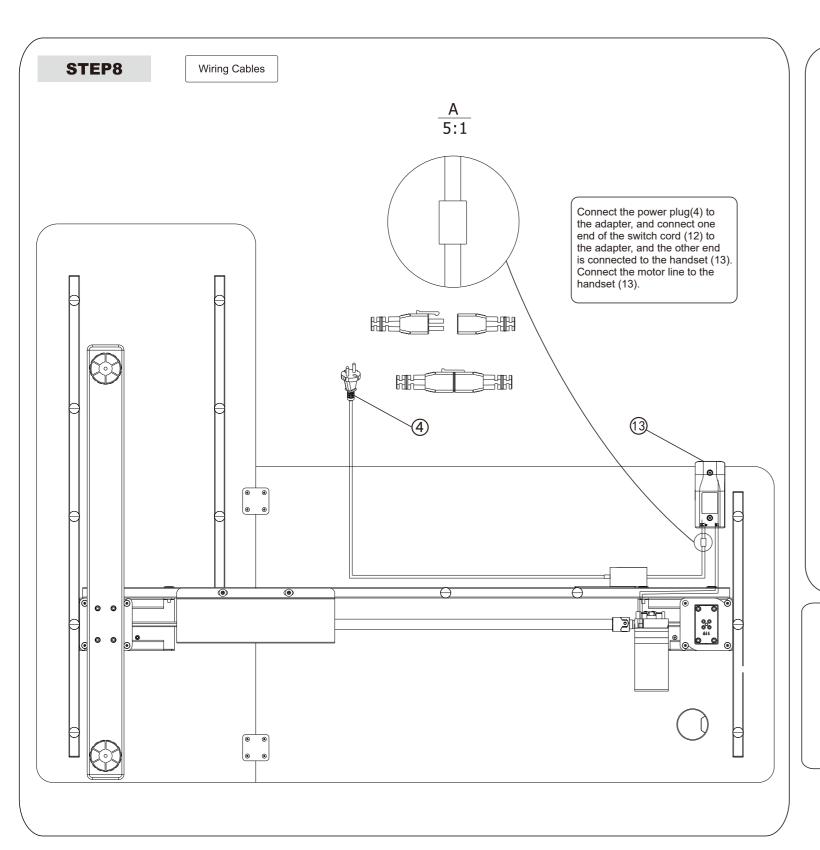

How to use handset

•	"▲"	Adjust the desk upwards
•	"▼"	Adjust the desk downwards


Operation

- Button Lift Function
- Press the "▲" or "▼" button to adjust the height of the desk.
- Reset Function
- (1) When at the lowest position, long press the "▼" button for more than 5 seconds to enter the reset mode. The reset will be finished until the lift system rebound and stop after reaching the bottom.
- (2) When the lifting system fails, release the button, long press the "▼" button, the reset will be finished until the lift system rebound and stop after reaching the bottom.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method	
No response while long pressing down arrow after connected with	1.Check if all the cables be connected well	
a power supply	2.Contact your supplier or dealer	
The decision sould not be lifted	1.Check if overloaded, max loading: 50kg	
The desktop could not be lifted	2.Contact your supplier or dealer	
Overwork (Duty cycle:Max 2min on/30min OFF)	Restart it after suspend for 30mins for the working time is too long	
(Daty Cyde.ivid. Zmin Oli/Somin Of 1)	2.Contact your supplier or dealer	

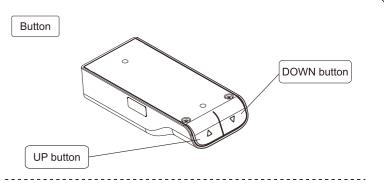



- 1. Power supply: AC100V-240V,50/60HZ
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector. 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household
- 5. Check carefully to ensure correct and complete assembly before using.
 6. Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers. 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any
- effect on the use of the equipment.

 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
- 11.Keep the original package of the equipment if necessary in case of the future use in transportation.
- 12. The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.