



# QUICK GUIDE

## BATTERY-POWERED BRUSHLESS SNOW BLOWER

### Assembly

1. Position the Snow Blower on a flat surface.
3. Lift the up the handlebar and drag it up to the operating position (**Figure 1**).  
**Note:** The rotating knobs on the handlebar should already be loosened. If they are not loose, rotate them in a counterclockwise direction to loosen.
4. Secure the handlebar into position by turning the rotating knob clockwise. (**Figure 2**).
5. Position the flange of the discharge chute onto the power unit and align the holes in the chute with the holes in the power unit (**Figure 3**).
6. Secure the discharge chute using the three screws and allen wrench that came with the machine.
7. Open the battery cover and insert the battery into one of the slots with the battery contacts facing the contacts in the housing (**Figure 3**).  
**Note:** If you are installing only the one battery, either of the two spaces can be used.
8. Push the battery down until there is a “click” indicating the battery is fully installed and locked in by the latch. The battery indicator light will illuminate momentarily.
9. If you have purchased a second battery, it can be installed in the opposite opening for longer runtimes.

### BATTERY NOTICE

- Charge battery full before first use
- Do not charge at below 0 °C
- Compatible with +62 volt 2.4AH and 5.0AH battery

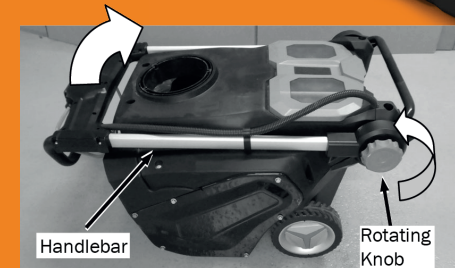


Figure 1

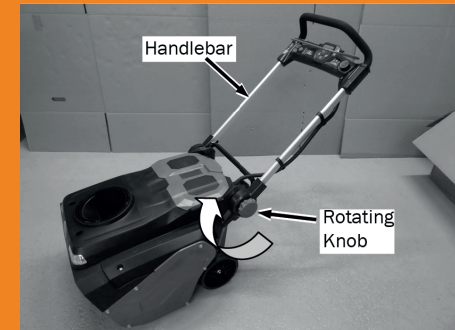


Figure 2

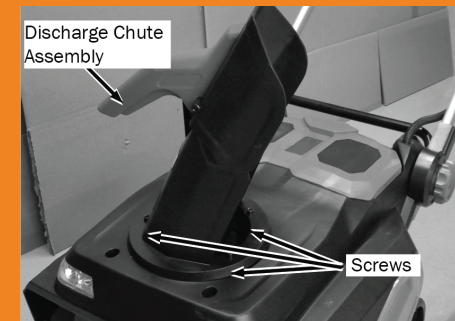


Figure 3

# How to use

## STARTING THE AUGER

1. Push and hold the safety lock button as you pull the switch lever to the handlebar (**Figure 4**). The motor will start and turn the auger.

**Note:** The motor will only turn on if the correct sequence of pushing the safety lock button first and switch lever second is followed.

## STOPPING THE AUGER

1. Release the switch lever fully to stop the auger.

## ADJUSTING THE AUGER SPEED

The auger speed can be adjusted to match the conditions you are working in. The lower speeds can also extend battery runtime. Slower speeds move less snow and will not throw it as far.

1. Start the auger (**Figure 7**).
2. Rotate the speed control knob counterclockwise to increase auger speed (**Figure 6**).
3. Rotate the speed control knob clockwise to decrease auger speed.

## CHANGING DIRECTION AND HEIGHT OF DISCHARGE

The chute assembly can be rotated 180 degrees side to side by a push of a button to direct the snow where desired.

1. To rotate the Chute Assembly to the right, press the upper Button (**Figure 7**).
2. To rotate the Chute Assembly to the left, press the lower Button (**Figure 7**).

## LED HEADLIGHT OPERATION

1. Push the LED Headlight Button to turn the Headlights on (**Figure 8**).
2. Push the LED Headlight Button again to turn the Headlights off.

## OPERATING TIPS

1. Always check the area for toys, shovels, ice chunks, or any other objects that might get caught in the auger before operating the Snow Blower.
2. Discharge the snow in the same direction that the wind is blowing if possible to prevent snow from being blown back at you already cleared areas.

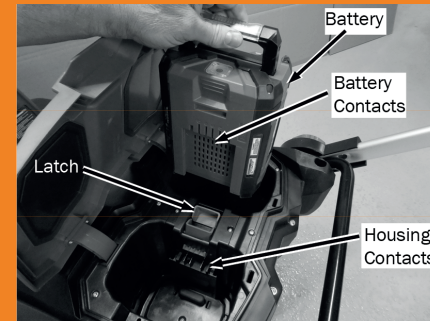


Figure 4

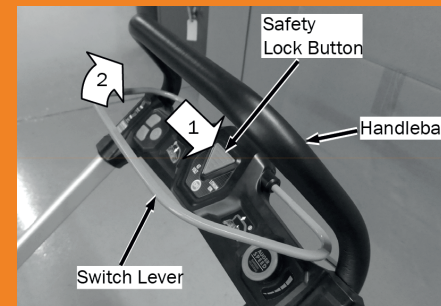


Figure 5

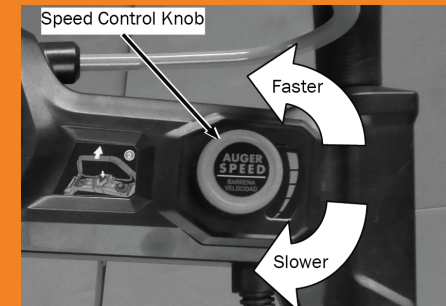


Figure 6

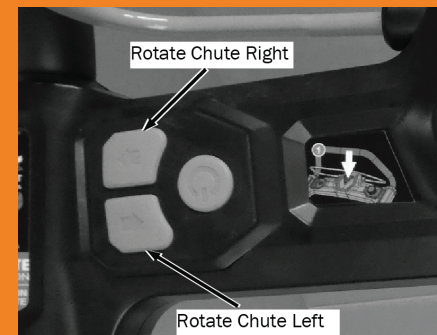


Figure 7



Figure 8